

# LOCKWOOD 9800 SERIES CONCEALED OVERHEAD DOOR CLOSER


TIMBER DOOR INSTALLATION INSTRUCTION

(Unit:mm)

CENTRE PIVOTED - DOUBLE OR SINGLE ACTING DOORS NOTE: ALL DIMENSIONS ARE BASED ON A 70mm PIVOT POSITION MINIMUM DOOR THICKNESS 38mm Fixing Bracket Fixing Bracket Clamp Block HINGE JAMB Side-load Arm Name Plate Arm Channel Door Clearance Pivot Base Adjustable Floor

# **DOOR GAP ALLOWANCE DOOR HEADER PREPARATION** 15mm Max (With extended spindle in TF kit) PIVOT DOOR FRAME POSITION DOOR LEAF 5mm Min. Allow sufficient door Rebate top of door gap to accommodate frame to the dimensions required door seals shown. 15mm Max.

Make 60 x 15mm cut out in the top of the door as shown. Cut must be on the inside face of the door.

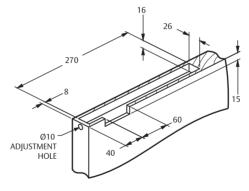


Fix arm channel with #10 x 30 flat head screws and install arm using M6 x 15 flat head machine screw and Ø21.5 washer. Install M6 x 25 dome head arm adjustment screw. Laterally adjust center of the arm spindle retainer from outside edge of door (not including weather-strips). Center arm in the top rail by adjusting the three 1/4" x 22 flat head machine screw centering bolts.

**TOP DOOR RAIL (SIDE LOADING ARM)** 

After installation of door, attach cover plate with self-tapping screw as provided.


NOTE: Before attaching cover plate, make certain the three 1/4" x 22 socket head clamp block cap screws are tightened securely.

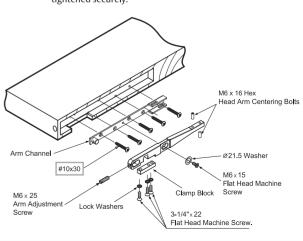

# BOTTOM DOOR RAIL (SIDE LOADING)

Install pivot bearing retainer in bottom of door using three 1/2" x 30 screws and lock washers.

Laterally adjust center of pivot bearing retainer from outside edge of door (not including weather-strips) and tighten screws firmly.

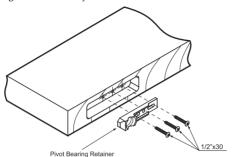

# INSTALLATION OF BODY INTO DOOR HEADER


Secure Fixing Bracket (A) into the door frame rebate.


Rebate bottom of door


to the dimensions


shown.

Secure Fixing Bracket (B) to the back of the door closer body.

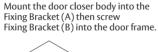

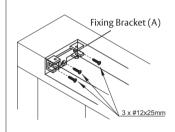

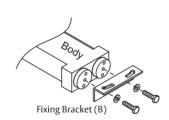

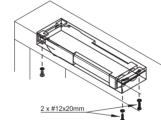


#### **FLOOR MOUNT PIVOT**

Center pivot base against door jamb on hinge side. Mark and drill Ø8 holes 40 deep in floor top plastic expansion plugs.

Mount base using Ø8 x 40 plastic expansion plugs and #12 x 25 flat head tapping screws.


#### **ATTENTION:**

Floor mount pivot base should be fixed on completely flat floor surface. If floor surface is not flat, make it flat before fixing floor mount pivot base.

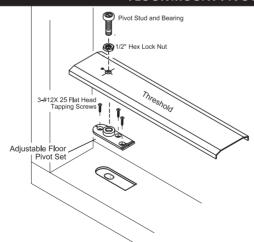

# SPEED ADJUSTMENT


Turn adjustment screw ① for desired closing speed then turn adjustment screw ② to produce a suitable latching speed.

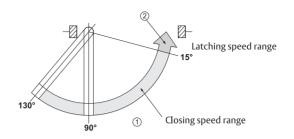

# PARALLEL DOOR POSITION ADJUSTMENT




# **CLOSED POSITION ADJUSTMENT DOOR**

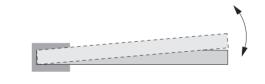


Closing position adjustable by screw A after loosening screw C.

#### **ATTENTION**

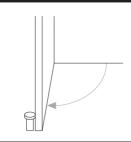

Opening the door wider than 90° (130°) capacity will seriously damage the closer.

A door stopper at the point of 90° (130°) is recommended to prevent the door from opening wider.

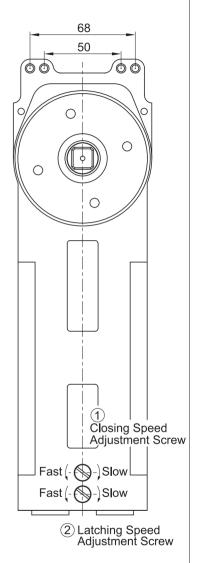

ASSA ABLOY Australia Pty Limited, 235 Huntingdale Rd, Oakleigh, VIC 3166 ABN 90 086 451 907 ©2022

Experience a safer and more open world

ASSA ABLOY