


# IS7340si / IS7350si

## Fitting Instructions: Frameless Glass Door Seals

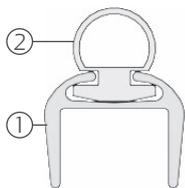

IS7340si (10mm)

IS7350si (12mm)

Length:

### Description of contents

- Polycarbonate carrier housing (1)
- Clear silicone gasket (2)
- Fitting Instruction

### Tools required for installation

- Tape measure
- Saw (power or hand)
- Knife
- Pencil or Marker

### Other Kilargo Architectural Seals include:

- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Kilargo office for further details.

### Installation detail: For glass doors


- Step 1** Remove the seal from the packaging, and measure the height of the meeting edge.
- Step 2** Cut to size using a saw for the polycarbonate carrier and a knife for the silicone gasket.
- Step 3** Wipe down the door edge to ensure it is free of grease and dust.
- Step 4** Remove the backing from the self adhesive tape and push-fit the carrier onto the meeting stile of the frameless glass door. Ensure the self adhesive tape is adhered to the glass.
- Step 5** Close the door and ensure the seal makes uniform contact with the opposite door leaf.

### Important

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

### Note

Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Kilargo and are given in good faith as a general guide and service to designers, contractors and manufacturers. Kilargo reserves the right to make alterations or delete any installation detail without prior notice.

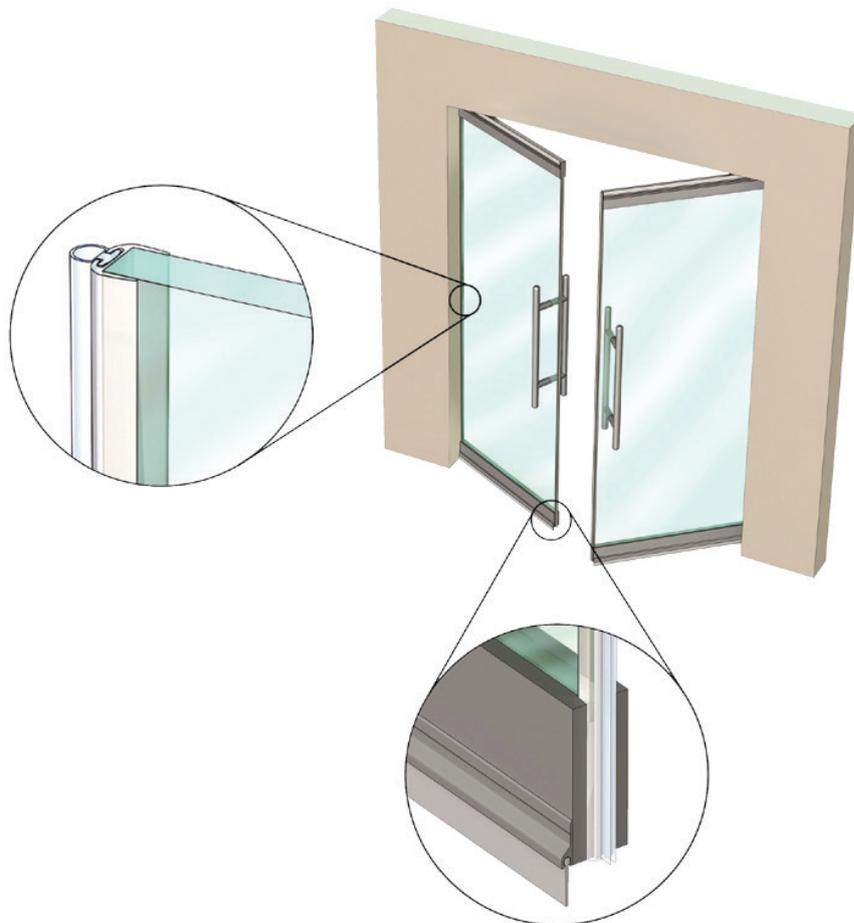

Literature Code: IS7340/50 06/17

15 Wentworth Place, Banyo Qld 4014  
T 1300 858 010 F +61 7 3861 9266 E sales@kilargo.com.au www.kilargo.com.au

 **Kilargo**