




<p>Product Item number</p>	<p>Lift for worktop, manually height adjustable RK1112</p>
<p>Product description</p>	<p>EAN:5708590292779 HMI: 54801</p>  <p>The name INDIVO relates to the individual configuration of the products.</p> <p>Manual lift for worktop Lift for worktop, with a crank handle Including 3 brackets Lengths from 1401-2000 mm. Height adjustable 300mm. Incl. mounting kit for brick wall Please state desired length when ordering</p>
<p>Adjustability Product capacity</p>	<p>Height adjustable</p> <p>Maximum load (evenly distributed): 100 kg including worktop.</p>
<p>Materials Ergonomy</p>	<p>Material: Telescopic leg: Aluminium, ABS plastic Cross braces: Aluminium Brackets: Steel Crank handle: Steel Surface treatment: Brackets: Powder lacquered (grey RAL 9006)</p> <p>Kitchen worktops which can be adjusted in height using a crank handle are the budget solution for kitchens catering to both seated and standing users. These are most commonly used in kitchens which do not require frequent, daily adjustment.</p>



Product	Lift for worktop, manually height adjustable
Item number	RK1112
Features	<p>Manual lifts are adjusted in height using a crank handle. They can be used with worktops, with or without an edge. The crank handle socket can be positioned anywhere along the front edge, except under a sink or hob.</p> <p>Lifts can be adapted to most standard kitchen components. Lifts are available for worktops of any length between 600 mm and 3000 mm. Height adjustable 300 mm.</p>
Warranty	<p>Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.</p>
Cleaning	<p>INDIVO lift for kitchen worktop. The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS: Clinimax Difficil-S Erisan OXY+</p> <p>NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p>

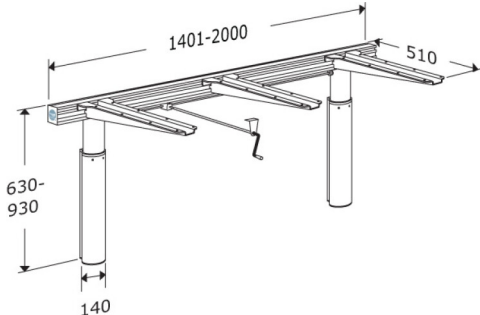

PRESSALIT®

Product	Lift for worktop, manually height adjustable
Item number	RK1112

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®